

Generic Stores Loading Training

Introduction

The Generic Stores Loading Trainer (GSLT) is a generic part task trainer designed to train students in carrying out procedures for loading and unloading weapons in a safe environment. The GSLT comprises a fixed wing installation on the one side of the trainer and a rotary wing installation on the other.

The fixed wing is presented to the student at a realistic height and size to provide operational realism and hazards. The wing may be fitted with two pylons to which missiles and bombs may be loaded and tested.

The rotary wing installation has a carrier to which depth charges, missiles and torpedoes may be loaded and tested. A Countermeasures and Defensive Aids System (CMDS) is included and may be loaded with Chaff and Flare.

Animated schematics allow the student to observe the weapon system control circuits, whilst an Instructors console enables scenarios to be set, faults to be injected and the students' progress monitored.




www.pennantplc.com

Contact: sales@pennantplc.com



Key Features

- Fixed wing installation:
 - Load and Unload missiles and bombs
 - Remove and Install pylons
 - Remove and Install launchers
 - Remove and Install Ejector Release Unit (ERU)
- Rotary wing installation:
 - Load and Unload Missiles, Depth charges and Torpedoes
 - Remove and Install Electromechanical Release Unit (EMRU)
 - Load and Unload Chaff and Flare
- Dummy Weapons (Supplied):
 - Air to Air Missile (AAM)
 - Air to Ground Missile (AGM)
 - Laser Guided Bomb (LGB)
 - Torpedo
 - Depth Charge
- General:
 - Safe handling procedures
 - No Volts Checks
 - Instructors console for scenario setting and injection of faults
 - Animated schematics for observation of weapon system control circuits
 - Supplied with test equipment and Ground Support Equipment (GSE)
 - Supplied Technical Publications

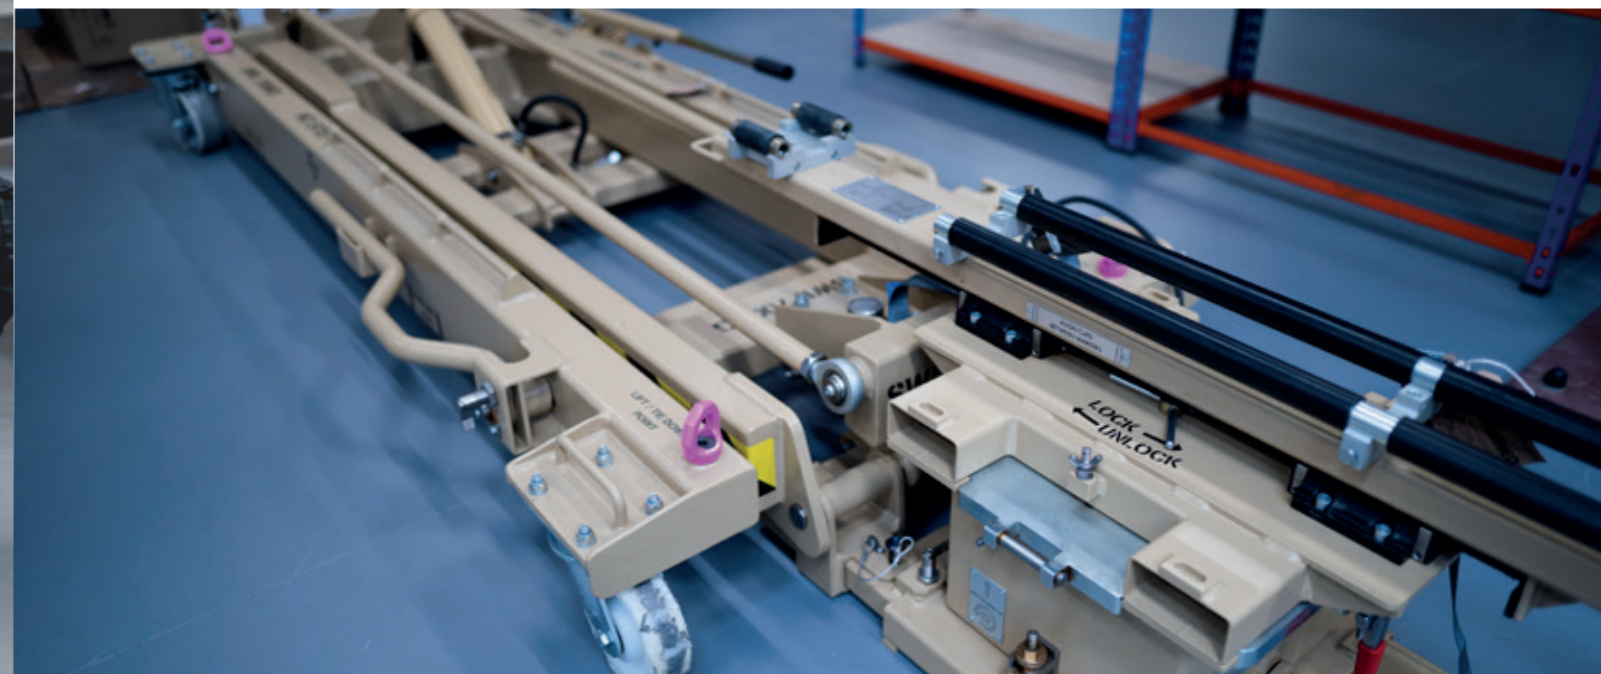

Aviation Regulations Alignment

EASA/EMAR PT 66	FAA	CITY & GUILDS	MEA UNITS
<p>Module 50.1 Essential principles of Armament (a) Propellants and explosives; Stores loading / unloading (to include chaff and flares) including hang-up and misfire; Air-to-air missile; Air-to-ground missile; Aerial torpedo; Bomb (guided); Weapon suspension system;</p> <p>Module 51.1 Weapons stores system (a) Weapon and stores release, fire and jettison stores; Weapon suspension system; Interconnecting equipment to transport and release/fire weapons;</p>	N/A	<p>2675-03 Level 3 Diploma in Aircraft Maintenance (a) Unit 111 Working safely with aircraft armament systems</p> <p>4608-60 Level 3 Diploma in Aviation Maintenance (Weapons Maintenance)</p> <p>(a) Unit 427 Testing installed aircraft armament systems and role equipment</p> <p>(b) Unit 429 Undertaking fault diagnosis on installed aircraft armament systems and role equipment</p> <p>(c) Unit 433 Removing aircraft armament system components and role equipment</p> <p>(d) Unit 435 Removing aircraft expendable stores</p> <p>(e) Unit 437 Installing aircraft armament system components and role equipment</p> <p>(f) Unit 439 Installing aircraft expendable stores</p>	<p>MEA 602 Remove and Install Aircraft Stores Management System Components</p> <p>MEA 603 Remove and Install Aircraft Stores Suspension System Components</p> <p>MEA 604 Inspect, Test and Troubleshoot Aircraft Stores Management Systems and Components</p> <p>MEA 605 Inspect, Test and Troubleshoot Aircraft Stores Suspension Systems and Components</p>

Environmental Specifications

PARTICULAR	VALUE	UNIT
Temperature Range (Operational)	+5°C to +40°C	°C
Humidity (Operational)	60% (Maximum Non-Condensing) ^{Note 1}	RH
Temperature Range (Non-Operational)	-25°C to +55°C ^{Note 2}	°C
Humidity (Non-Operational)	85% (Maximum Non-Condensing) ^{Note 1}	RH
Noise	65	dBA

Note 1 : Harmful effects of occasional condensation shall be avoided by additional measures within the facility.
Note 2 : Short periods not exceeding 24 h at up to +70°C.

Physical Specifications

PARTICULAR	VALUE	UNIT
Length	4903	mm
Width	4665	mm
Height	2025	mm
Weight	1500	Kg



Supported Training

SYSTEM	PRACTICAL TASK	SIMULATED FAULTS
FIXED WING	1. Pylon (Inboard) Remove & Install	1. ERU switch stuck (Open) (Inboard)
	2. Pylon (Outboard) Remove & Install	2. ERU switch stuck (Closed) (Inboard)
	3. Ejector Release Unit (ERU) (Inboard) Remove & Install	3. ERU switch stuck (Open) (Outboard)
	4. ERU (Outboard) Remove & Install	4. ERU switch stuck (Closed) Outboard
	5. AAM Launcher Remove & Install	5. Armament Junction Box Spurious voltage (Inboard)
	6. AGM Launcher Remove & Install	6. Armament Junction Box Spurious voltage (Outboard)
	7. LGB Load & Un-Load	7. Stores Management Processor (SMP) Bit failure
	8. AGM Load & Un-Load	8. Weapon Control Panel (WCP) MASTER ARMAMENT SAFETY SWITCH (MASS) stuck open
	9. AAM Load & Un-Load	9. WCP MASS - switch stuck closed
	10. AAM Built in Test (BIT)	10. MASS Switch internal failure (SMP shut down)
	11. AGM Built in Test (BIT)	11. MASS switch internal failure (Busbars not energised)
	12. Fixed Wing Pylon Test	12. Emergency Jettison Switch – Switch stuck open
	13. ERU No Volts Test	13. AAM – Open circuit
	14. AAM No Volts Test	14. AAM – Bit degraded
	15. AGM No Volts Test	15. AAM – Bit failed
	16. Stores Management System (SMS) operated Assisted BIT	16. AGM – Open circuit
	17. SMS Weapon Insertion Panel (WIP) Data Load	17. AGM – Bit degraded
	18. AGM – Bit failed	
ROTARY WING	1. Electromagnetic Release Unit (EMRU) Remove & Install	1. AGM – Open Circuit
	2. AGM Launcher Remove and Install	2. AGM – Bit degraded
	3. CMDS Chaff Load & Un-Load	3. AGM – Bit failed
	4. CMDS Flare Load & Un-Load	
	5. CMDS Combined Chaff and Flare Load & Un-Load;	
	6. Depth Charge Load & Un-Load	
	7. Torpedo Load & Un-Load	
	8. AGM Built in Test	
	9. CMDS No Volts Test	
	10. AGM No Volts Test	
	11. SMS Test	

Supplied Documentation

Operation Manual
Maintenance Manual
Student Manual (Technical Publications)

Optional Accessories

Spares Kit

Ordering Information

98610-000-0001A	GSLT
98610-3021	Spares Pack



